## **Replacement Guide**

# **Interface R-180**

Unlock more insights and guidance through our media resources:



www.buchi.com/r-180/installation



### NOTE

Reading and following the instructions in this document does not replace reading and following the instructions in the operation manual.

- ➤ This operation must be performed by qualified, authorized and trained technicians, consistent with the local applicable regulations.
- Only carry out the service described in this section.
- Use only genuine BUCHI spare parts in order to ensure correct operation and preserve the warranty.
- ► Carry out the service described in this section to extend the lifetime of the instrument.

# Interface R-180

	Order no.	Image
Interface R-80 / R-180, complete	11080629	

### Tools

	Order no.	Image
Torx size 10	none	

# Replacing the interface

Precondition:


☑ Instrument is disconnected from the main supply.

- ► Remove all connections.
- ▶ Remove all accessories.
- ► Remove all glass parts.
- ► Remove the heating bath.






Carefully open the interface housing.

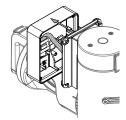


► Open the ribbon connector with the finger.

 
NOTICE! Do not use a screwdriver to open ribbon connectors. It can damage the pins and the ribbon cable.



- ► Gently remove the ribbon cable.
- ► Remove the damaged interface.
- ► Keep the sealing.
- ▶ Dispose the interface. See "Operation Manual Rotavapor® R-180".
- ► Reposition the sealing.

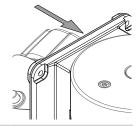


- ► Take the new interface.
- ► Carefully guide the ribbon cable into the ribbon connector.

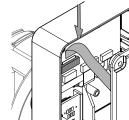

► Close the ribbon connector with the finger.

NOTICE! Do not use a screwdriver to close ribbon connectors. It can damage the pins and the ribbon cable.

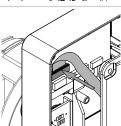




11594757A en Interface R-180 09.2025





 - ► Position the interface housing.
- ➤ Slightly shake the interface housing that the sealing remains in position and to avoid sealing damage.



► Position and tighten the four screws.

